SCOSCHE

TA2088B

IN-DASH DIN STEREO INSTALLATION KIT FOR 2004-UP TOYOTA SIENNA

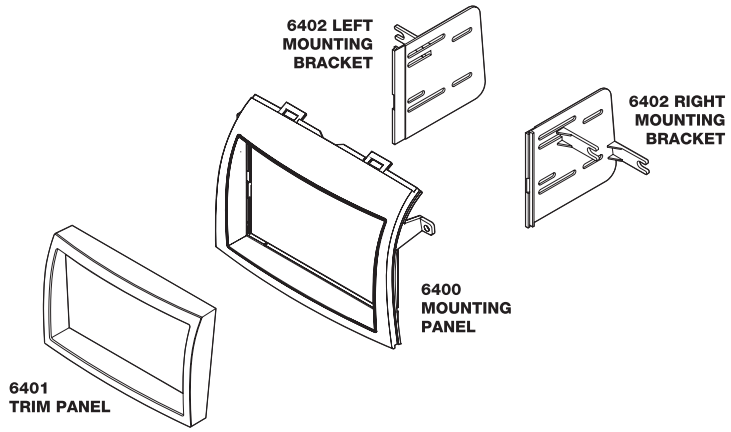

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2004-up Toyota Sienna vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

STOP
IMPORTANT!
Do Not Return Product to the Retailer!
IF YOU NEED ASSISTANCE OR REPLACMENT PARTS
Call us FIRST at . . .
1-800-621-3695 ext 3
Toll Free, No-Charge tech support
FRIENDLY CUSTOMER SERVICE TECHNICIANS
YOU WON'T BE ON HOLD LONGER THAN 5 MINUTES
OUR HOURS ARE:
Monday - Friday 8:00 a.m. to 5:30 p.m. (PST)
Saturday 8:00 a.m. to 2:00 p.m. (PST)

©2007 SCOSCHE INDUSTRIES, INC.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA07SR
2003-up Toyota stereo replacement interface FOR JBL SYNTHESIS SYSTEM

TA02B
1997-up Toyota non-amplified

FACTORY STEREO REMOVAL

2004-UP TOYOTA SIENNA
STEREO REMOVAL AND IN-DASH INSTALLATION

1. Carefully unsnap and remove trim panels from left and right of stereo.
2. Carefully pry up on trim panel at top of stereo. Unsnap and remove.
3. Remove (4) bolts securing factory stereo. Unplug and remove.

MOUNTING THE STEREO

ATTACHING MOUNTING BRACKETS

Align the (2) "L" wedges on the mounting brackets with the location openings on the kit mounting panel and press into place (see below).

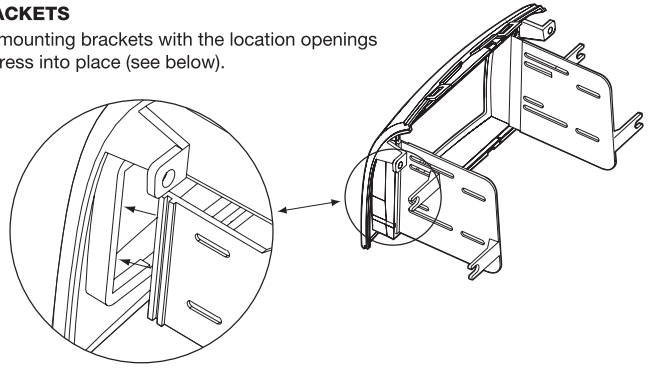

ATTACHING THE DOUBLE DIN STEREO

1. Align and position the aftermarket stereo with the left and right 6402 mounting brackets.
2. Use the screws supplied with the aftermarket double din stereo to secure the stereo to the mounting brackets.

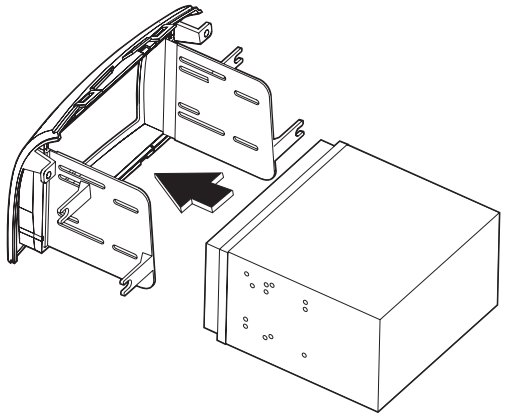

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/ codes and information pertaining to installation of this kit (TA2088B) in 2000-04 Toyota Sienna vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.